


Series ACR Coupon Rack

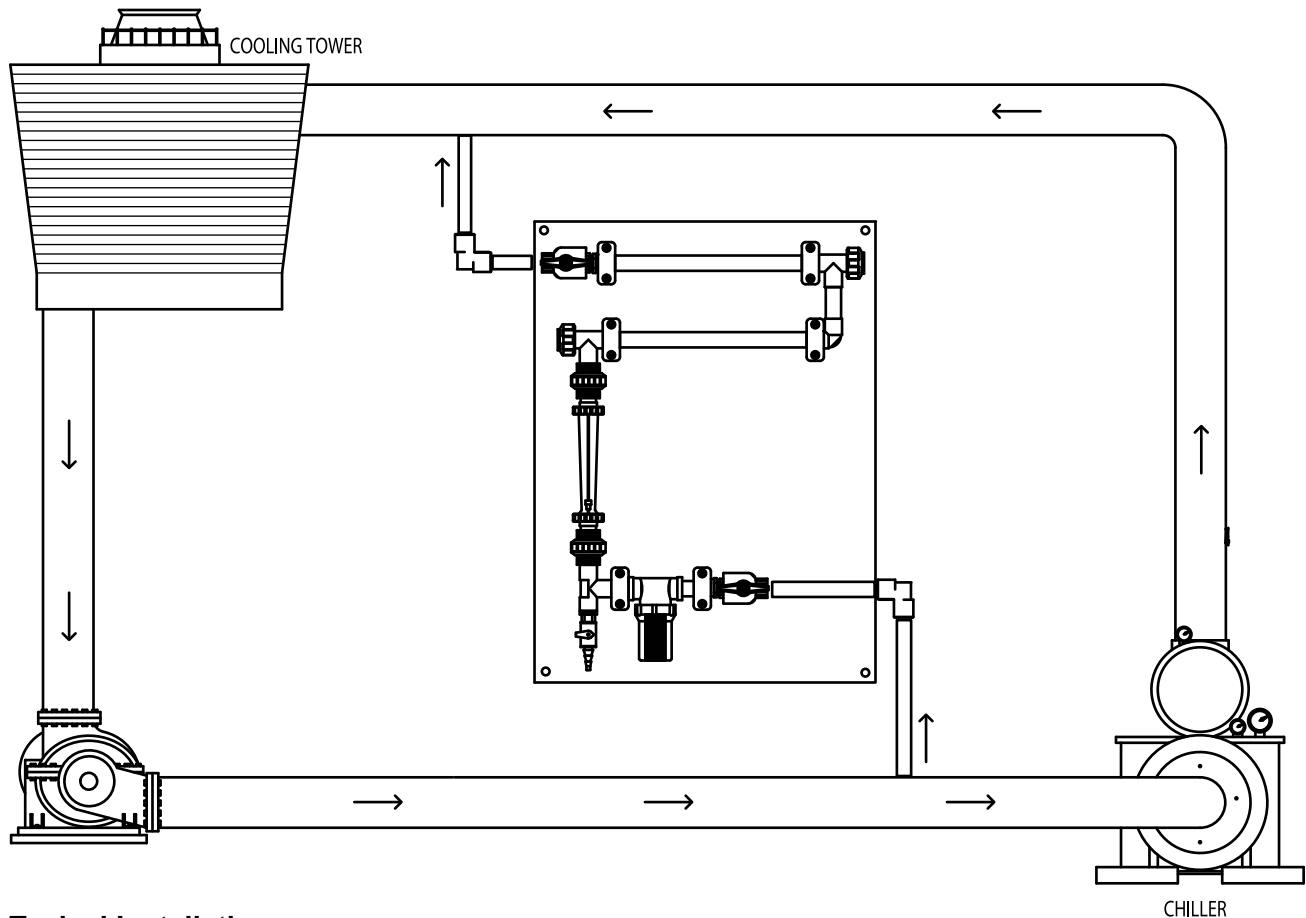

Typical Installation

1. Securely mount coupon rack panel to a flat vertical surface that can support the rack's weight and allows for easy access to remove coupons.
2. Run a sample line pipe that matches the ACR piping size to the inlet valve and from the outlet valve of the coupon rack.
3. Inlet pressure must be greater than outlet pressure to assure flow through the coupon rack. A flow rate between 3 and 10 gallons per minute is recommended.
4. To insert and remove coupons, close the inlet and outlet ball valves and loosen coupon holder. Retighten by hand taking care to seat holder o-ring properly.

Warning

- Do not circulate water with a temperature higher than the coupons rack's piping material rating.
- Follow plumbing codes & do not exceed pressure & temperature ratings of piping materials and optional components
- Allow for 8" of clearance on coupon holder sides.

4/2015