


RTP-3 / RTP-4

pH/ORP Pre-Amp Installation Diagrams

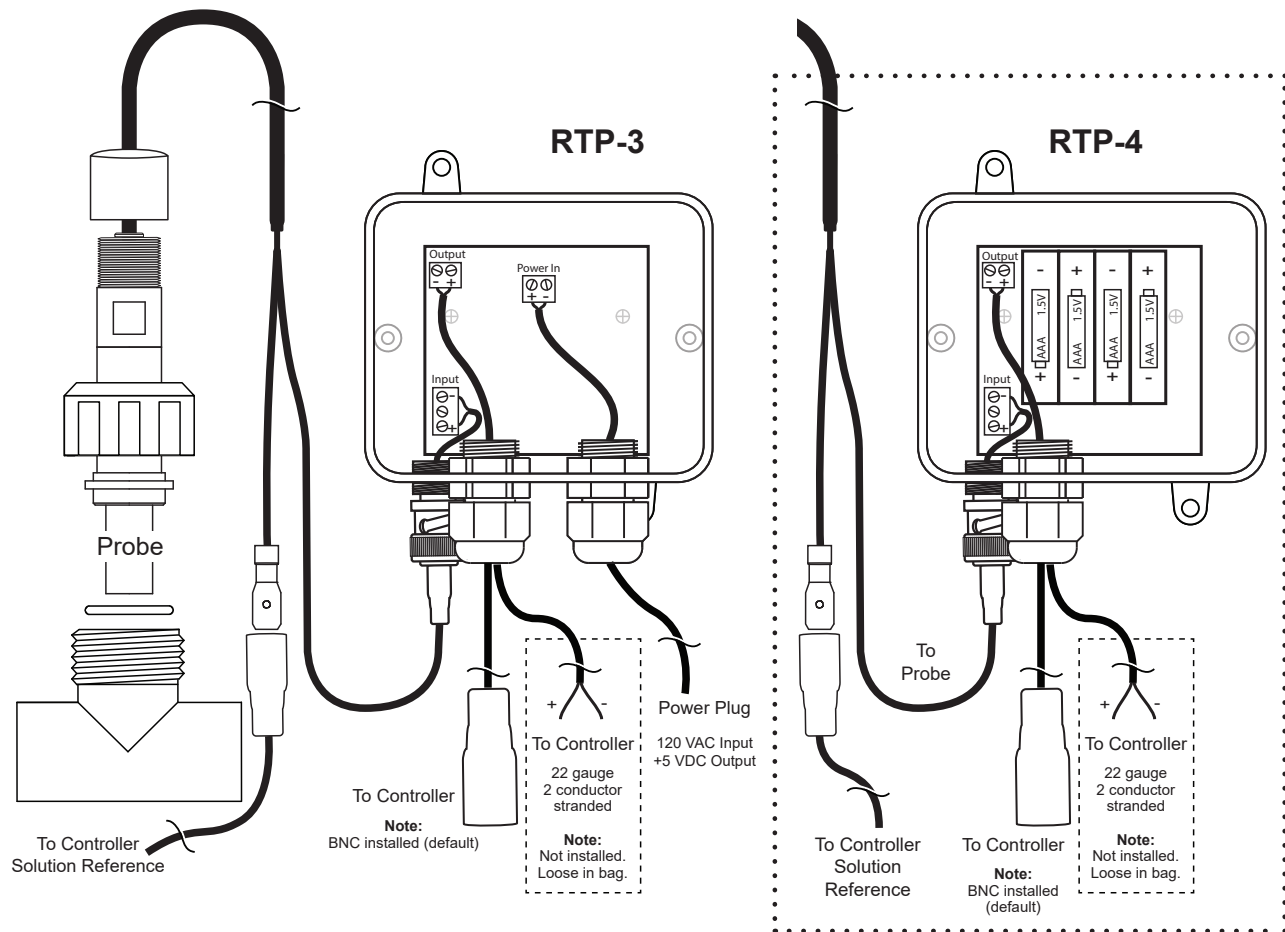

Pre-amps are supplied with both a BNC or two-conductor wire cable to connect between pre-amp and controller. The two-conductor cable can be ran directly to the pH input on the controller board. The BNC connector requires a special extension cable.

Extension cables available:

- PH-EXT-10
- PH-EXT-50
- PH-EXT-100

08/2024