

Motor Starter

Instructions

The Advantage motor starter is used to activate devices that draw more current than our standard control relay's rating.

Motor starter can also be used to convert 120VAC signal to a dry contact.

Specifications:

- **Input** 120VAC
- **Output** 0-120VAC
- **Current** 25-amp max
- **Single phase motors**

Models:

- MS-001** Box & 25-amp relay only - no liquid tight or prewired connections.
- MS-002** Prewired 25-amp relay, fused, 2 male, 1 female, 13-amp cords.
- MS-003** Prewired 25-amp relay 120 input with 2-wire dry contact output.
- MS-003-001** Mounts a MS-003 on a poly panel with separately-ordered NANO-F2.

